



IMPORTANT NOTE: Enclosure will need to be fully connected to a working system before powering ON the enclosure. Enclosure will not power ON if stand alone without connecting to a working system. If not connected it assume in sleep mode and often user think the enclosure is defective but it is not. Energy Saving Function: Enclosure will not power ON (in sleep) if not connected to working system.

