



2-Port Parallel PCI Host Card

User Manual

Model: UGT-PC20PL

**All brand names and trademarks are properties of their respective owners
www.vantecusa.com**

Contents

Features and Benefits	3
System Requirements	3
Package Contents.....	3
Hardware Installation.....	3
Driver Installation	4

Features and Benefits

- Compliant with PCI Local Bus Specification, Revision 2.3
- Add two IEEE 1284 Parallel Ports on system
- Easy Plug and Play
- Automatic selects IRQ & I/O address
- Supports Standard Parallel Port (SPP), Enhanced Parallel (EPP) & Enhanced Capability Port (ECP)
- Faster data rates up to 1.5Mbytes/sec
- PCI 32-bit
- 2 x DB25 female parallel connectors

System Requirements

- Windows XP/Vista/7/8 (32/64 bit)
- Available PCI slot

Package Contents

- 1 x 2-Port Parallel PCI Host Card
- 1 x Bracket with one DB25 female parallel port
- 1 x Driver CD
- 1 x User Manual
- 2 x Low Profile Brackets

Hardware Installation

1. Turn off the power to your computer.
2. Unplug the power cord and remove your computer's cover.
3. Remove the slot bracket from an available PCI slot.

4. To install the card, carefully align the card's bus connector with the selected PCI slot on the motherboard. Push the board down firmly.
5. Replace the slot bracket's holding screw to secure the card.
6. Secure the computer cover and reconnect the power cord.

Driver Installation

1. Insert the provided CD into your CD-ROM drive.
2. At the Windows Desktop, click **Start**, and then **Run**.
3. When the prompt displays
For Windows XP/Vista/7/8 32-bit – Enter “**D:\UGT-PC20PL\Windows\32Bit\PCISetup.exe**” (where “D” is the designation of your CD drive)
For Windows XP/Vista/7/8 64-bit – Enter “**D:\UGT-PC20PL\Windows\64Bit\PCISetup.exe**” (where “D” is the designation of your CD drive)
4. Follow the on-screen instructions to complete the installation.