Ribbon Tape

Screw set

1. Verify the package contents.

2. Hold the enclosure at the angle shown to remove the cover.

Peel Off adhesive label

3. Peel off adhesive pad off ribbon and tape ribbon onto Drive shown.

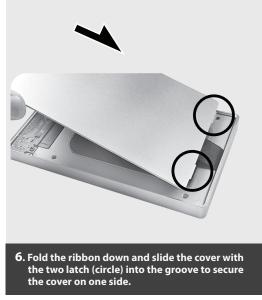NOTE : Orientation of Drive

4. Slide the drive at an angle into the SATA interface until it is seated all the way into the interface and the drive seat into the enclosure. Keep the ribbon out.
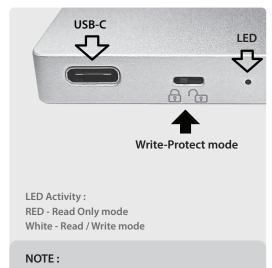
Optional Step for drive removal

5. The purpose of the ribbon is for easy removel of the drive when needed. Just lift the ribbon slightly up and hold the drive to remove.

6. Fold the ribbon down and slide the cover with the two latch (circle) into the groove to secure the cover on one side.

7. Secure two silver screws to hold the cover in place. The Storage is ready.

Preparing the newly installed SSD for use:

All NEW USB storage needs to be initialized, partition and formatted for the Operating System you are using before it can store data. For Windows OS, use Disk Management and for OS X, use Disk Utility.

If the drive is not new and has important data on it, DO NOT initialize. If you initialize the drive, it will erase all the DATA on it.

For detail, instruction refers to the FAQ **"How to preparing a New storage, Hard Drive, or SSD for use with a system"** on our website support section at **www.vantecusa.com**

USB-C

LED

Write-Protect mode

LED Activity :
RED - Read Only mode
White - Read / Write mode

NOTE :
For Write-Protect to function correctly, You MUST adjust Read Only or Read/Write mode before connecting USB to Computer